

# GT-3000

## Hubless Rotor & Drum Set Instructions



# GT-3000

**Please read instructions before using.**


© 2000 Goodtool

4/27/00

### Instructions for use

1. Remove Rotor from vehicle and clean rust from Rotor surfaces. Mark lug bolt and matching rotor hole to install the Rotor back in the same position.
2. Slide Backing Plate (A) on arbor.
3. Slide Rotor on arbor with hat section facing the Backing Plate.
4. Place Centering Cone (B) on arbor with small taper facing center hole of the Rotor. Cone selection to meet the bore size of Rotor.
5. Place Front Cup with spring (C) facing the Centering Cone.
6. Place the Self-Aligning Spacer (D) on the arbor against the Front Cup.
7. Place Spacers (E) as required to fill any extra space on the arbor.
8. Use Arbor Nut to tighten components onto the arbor.

**NOTE:** Brake Drums are mounted in the similar manner.

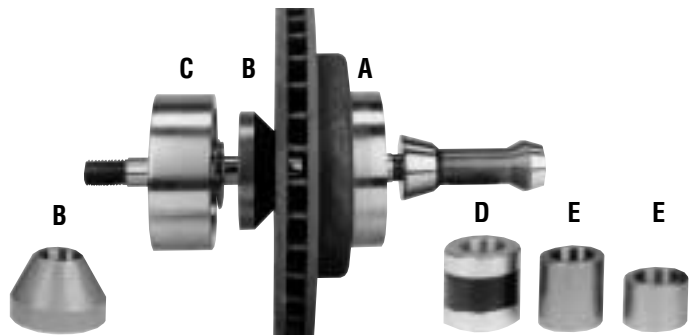

# GT-3000

## Hubless Rotor & Drum Set Instructions



# GT-3000

**Please read instructions before using.**

© 2000 Goodtool

4/27/00

### Instructions for use

1. Remove Rotor from vehicle and clean rust from Rotor surfaces. Mark lug bolt and matching rotor hole to install the Rotor back in the same position.
2. Slide Backing Plate (A) on arbor.
3. Slide Rotor on arbor with hat section facing the Backing Plate.
4. Place Centering Cone (B) on arbor with small taper facing center hole of the Rotor. Cone selection to meet the bore size of Rotor.
5. Place Front Cup with spring (C) facing the Centering Cone.
6. Place the Self-Aligning Spacer (D) on the arbor against the Front Cup.
7. Place Spacers (E) as required to fill any extra space on the arbor.
8. Use Arbor Nut to tighten components onto the arbor.

**NOTE:** Brake Drums are mounted in the similar manner.

